MASTER FORCE®

FLEXPOWER®

CHOOSE YOUR TOOL. CHOOSE YOUR POWER.

Angle Grinder

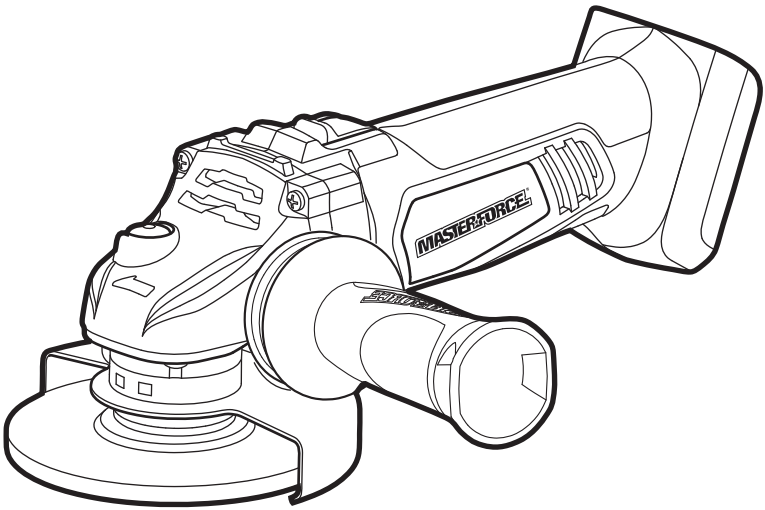

241-0438

OPERATOR'S MANUAL

⚠ CAUTION: To Reduce The Risk Of Injury, User Must Read And Understand Operator's Manual. Save These Instructions For Future Reference.

For questions / comments, technical assistance or repair parts –
Please Call Toll Free: 1-866-917-4374. (M-F 8am – 6pm EST)

TABLE OF CONTENTS

Safety Symbols. . . . . Page 2
Safety Instructions . . . . . Page 3
Overview/Specifications . . . . . Page 8
Assembly . . . . . Page 9
Operation . . . . . Page 9
Maintenance . . . . . Page 13
Troubleshooting . . . . . Page 13
Warranty . . . . . Page 18

SAFETY SYMBOLS

Some of these following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and more safely.

Symbol	Name	Designation / Explanation
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watts	Power
∿	Alternating current	Type of current
⎓	Direct current	Type or characteristic of current
n	Rated speed	Maximum rotational speed with any recommended accessory installed.
⧈	Class II construction	Double insulated construction
.../min	Per minute	Revolutions, strokes, surface speed orbits, etc., per minute
	Wear safety goggles	**⚠ WARNING: The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full-face shield when needed. We recommend a Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.**

⚠ WARNING: To ensure safety and reliability, all repairs should be performed by a qualified service technician.

SAFETY INSTRUCTIONS

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols and the explanations with them deserve your careful attention and understanding. The symbol warnings do not, by themselves, eliminate any danger. The instructions and warnings they give are not substitutes for proper accident prevention measures.

⚠ WARNING: Be sure to read and understand all safety instructions in this manual, including all safety alert symbols such as "DANGER," "WARNING," and "CAUTION" before using this tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

SYMBOL MEANING

SAFETY ALERT SYMBOL: Indicates DANGER, WARNING, OR CAUTION. May be used in conjunction with other symbols or pictographs.

⚠ DANGER: Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

⚠ WARNING: Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE: (Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SAVE THESE INSTRUCTIONS!

SAFETY INSTRUCTIONS

⚠ WARNING: READ ALL SAFETY WARNINGS AND INSTRUCTIONS!

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious personal injury. Save all warnings and instructions for future reference.
The "term power tool" in the warnings refers to your mains-operated (corded) power or battery-operated (cordless) power tool.

⚠ WARNING: Risk of fire and electric shock. Dry location use only. Do not expose to rain. Risk of injury.

WORK AREA SAFETY

1. Keep the work area clean and well lit. Cluttered or dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks, which may ignite the dust or fumes.
3. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRICAL SAFETY

1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
3. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. If operating a power tool in a damp location is unavoidable, use a ground-fault circuit interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.

PERSONAL SAFETY

1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
3. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
4. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
5. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
6. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
7. If devices are provided for the connection of dust extraction and collection facilities,

ensure that these are connected and properly used. Use of these devices can reduce dust-related hazards.

POWER TOOL USE AND CARE

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and more safely at the rate for which it was designed.
2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store side power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. Use the power tool, accessories, tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

1. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
3. When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, also seek medical help. Liquid ejected from the battery may cause irritation or burns.

SERVICE

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

SPECIFIC SAFETY RULES FOR ANGLE GRINDER

1. To reduce the risk of electric shock or damage to the charger and battery, use only the batteries and charger listed.

Battery pack	Charger
252-8024	252-8025 252-8036 252-8037 252-8044
252-8028	
252-8029	
252-8030	
252-8031	
252-8032	
252-8033	
252-8034	

2. This power tool is intended to function as a grinder. Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

3. Do not use accessories that are not specifically designed and recommended by the tool manufacturer. Just because the accessory can be attached to your power tool, safe operation is not assured.

4. The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool. Accessories running faster than their RATED SPEED can break and fly apart.

5. The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool. Incorrectly sized accessories cannot be adequately guarded or controlled.

6.Threaded mounting of accessories must match the grinder spindle thread. For accessories mounted by flanges, the arbor hole of the accessory must fit the locating diameter of the flange. Accessories that do not match the mounting hardware ofthe power tool will run out of balance, vibrate excessively and may cause loss of control.

7. Do not use a damaged accessory. Before each use inspect the accessory such as abrasive wheels for chips and cracks. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute. Damaged accessories will normally break apart during this test time.

8. Wear personal protective equipment. Depending on application, use a face shield, safety goggles or safety glasses. As appropriate, wear a dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtrating particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.

9. Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment. Fragments of workpiece or of a broken accessory may fly away and cause injury beyond the immediate area of operation.

10. Hold the power tool by the insulated gripping surfaces only when performing an operation where the grinding accessory may contact hidden wiring or its own cord. A cutting accessory contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.

11. Never lay the power tool down until the accessory has come to a complete stop. The spinning accessory may grab the surface and pull the power tool out of your control.

12. Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
13 Regularly clean the power tool's air vents. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
14. Do not operate the power tool near flammable materials. Sparks could ignite these materials.
15. Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.

FURTHER SAFETY INSTRUCTIONS FOR OPERATION

KICKBACK AND RELATED WARNINGS
1. Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. Always use an auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up. The operator can control torque reactions or kickback forces, if proper precautions are taken.
2. Never place your hand near the rotating accessory. The accessory may kickback over your hand.
3. Do not position your body in the area where the power tool will move if kickback occurs. Kickback will propel the tool in the direction opposite to the wheel's movement at the point of snagging.
4. Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory. Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
5. Do not attach a saw chain woodcarving blade or toothed saw blade. Such blades create frequent kickback and loss of control.

ADDITIONAL SAFETY INSTRUCTIONS FOR GRINDING OPERATIONS

1. Use only wheel types that are recommended for your power tool and the specific guard designed for the selected wheel. Wheels for which the power tool was not designed cannot be adequately guarded and are unsafe.
2. The grinding surface of centre depressed wheels must be mounted below the plane of the guard lip. An improperly mounted wheel that projects through the plane of the guard lip cannot be adequately protected.
3. The guard must be securely attached to the power tool and positioned for maximum safety, so the least amount of wheel is exposed towards the operator. The guard helps to protect the operator from broken wheel fragments, accidental contact with wheel and sparks that could ignite clothing.
4. Wheels must be used only for recommended applications. For example: do not grind with the side of cut-off wheel. Abrasive cut-off wheels are intended for peripheral grinding, side forces applied to these wheels may cause them to shatter.
5. Always use undamaged wheel flanges that are of the correct size and shape for your selected wheel. Proper wheel flanges support the wheel thus reducing the possibility of wheel breakage. Flanges for cut-off wheels may be different from grinding wheel flanges.
6. Do not use worn down wheels from larger power tools. A wheel intended for a larger power tool is not suitable for the higher speed of a smaller tool and may burst.

⚠ DANGER: **People with electronic devices, such as pacemakers, should consult their physician(s) before using this product. Operation of electrical equipment in close proximity to a heart pacemaker could cause interference or failure of the pacemaker.**

⚠ WARNING: **Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:**

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products, and
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

OVERVIEW

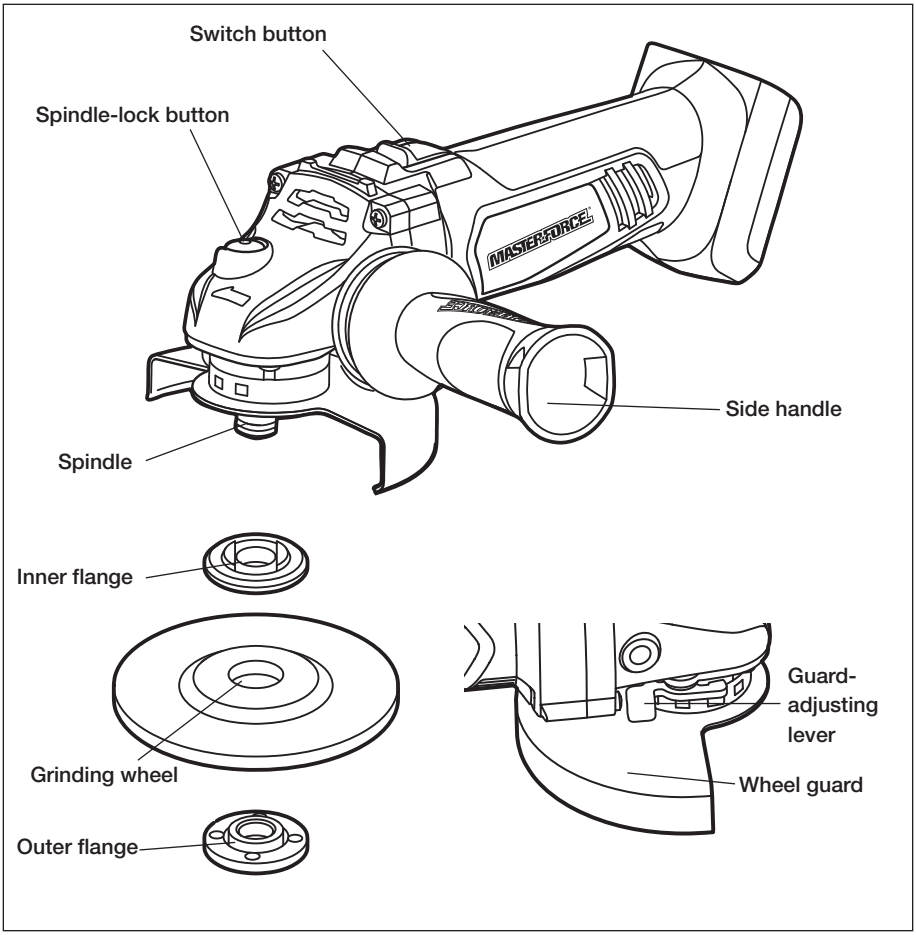

SPECIFICATIONS

Rated speed	9000 RPM
Wheel diameter	4 -1/2" (115 mm)
Arbor size	5/8"
Tool weight (without battery)	3 lbs.(1.37kg)

ASSEMBLY

⚠ WARNING: If any part is broken or missing, DO NOT attempt to plug in the power cord, attach the battery, or operate the tool until the broken or missing part is replaced. Failure to do so could result in possible serious injury.

⚠ WARNING: Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious injury.

⚠ WARNING: Your tool should never be connected to the power source when you are assembling parts, making adjustments, installing or removing application tools, cleaning, or when it is not in use. Disconnecting the tool will prevent accidental starting, which could cause serious personal injury.

CONTENTS

Cordless angle grinder, side handle, wrench, 4-1/2" grinding wheel and instruction manual.

UNPACKING

1. Carefully remove the tool and any accessories from the box. Make sure that all items listed in the packing list are included.
2. Inspect the tool carefully to make sure that no breakage or damage occurred during shipping.
3. Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.

OPERATION

TO ATTACH THE BATTERY PACK (FIG. 1)

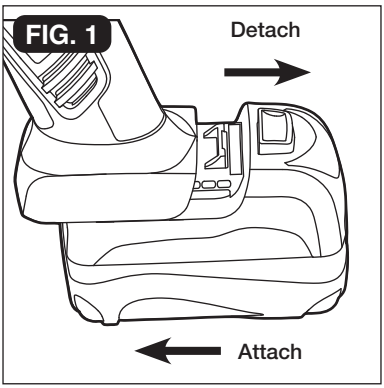

⚠ WARNING: To avoid the possibility of accidental starting, always take care not to activate the trigger switch when you are attaching the battery pack or performing other adjustments to the tool.

1. Make sure that the angle grinder is turned off.
2. Align the raised rib on the battery pack with the grooves on the bottom of the tool, and then attach the battery pack to the angle grinder.

NOTICE: When attaching the battery pack to the tool, make sure that the raised platform on the pack aligns with the grooves on the bottom of the tool and that the latches snap properly into place. Improper assembly of the battery pack can cause damage to internal components.

TO DETACH BATTERY PACK (FIG.1)

1. Make sure that the angle grinder is turned off.

2. Depress the battery-release button located on the front of the battery pack to release the battery pack.
3. Pull the battery pack forward to remove it from the tool.

ON/OFF SWITCH (FIG. 2)

⚠ WARNING: Firmly grasp the body of the tool and the side handle before starting.

The tool is switched "ON" with the switch button located at the top of the motor housing. The switch can be locked in the "ON" position, a convenience for long grinding operations. The symbol "O" on the motor housing indicates OFF; the symbol "I" indicates ON.
1. To turn the tool ON without locking it, slide the switch button forward by applying pressure only at the rear portion of the button.
2. To unlock the switch and turn the tool OFF, press and release the rear portion of the switch button; it will return to the OFF position automatically.

FOR CONTINUOUS OPERATION (FIG. 2)

1. Push the switch button forward to the ON position and press the front of the button down until the switch clicks into position.
2. To unlock the switch and turn the tool OFF, press the rear of the button.

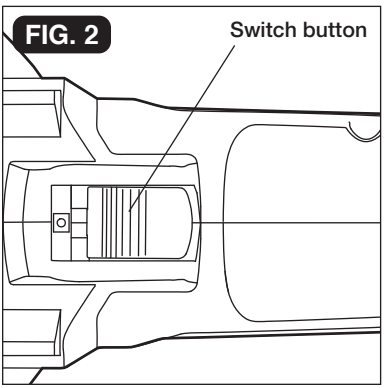

INSTALLING THE SIDE HANDLE (FIG. 3)

The side handle is used to guide and balance the tool and can be threaded into the front housing on either side of the tool, depending on personal preference and comfort. Use the side handle for safe control and ease of operation.

⚠ WARNING: Failure to remove the battery pack from the cordless angle grinder when assembling parts, making adjustments, or changing application tools could result in accidental starting and cause serious injury.

1. Remove the battery pack from the angle grinder.
2. The side handle may be installed on the right side or the left side of the tool. Thread the side handle into the desired operating position.
3. Securely tighten the side handle by turning it clockwise.

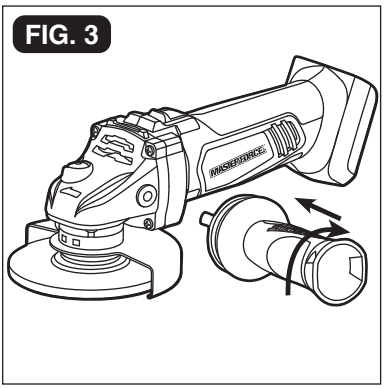

OPERATION

ADJUST THE GUARD (FIG. 4)

⚠ WARNING: Failure to remove the battery pack from the cordless angle grinder when assembling parts, making adjustments, or changing application tools could result in accidental starting and cause serious injury.

1. Remove the battery pack from the angle grinder
2. Press the guard-adjusting lever, and hold it to loosen the guard.
3. Rotate the guard to the desired position and make sure that the lever lines up with notches on the guard.
4. Release the guard-adjusting lever to lock the guard; verify that the lever secures the guard.

⚠ WARNING: ALWAYS use the guard when grinding with a grinding wheel. It has been designed for use only with the guard attached. Attempting to use the grinder with the guard removed will result in loose particles being thrown against the operator and possibly serious personal injury.

⚠ WARNING: Only use the guard with grinding wheels. Make sure that the guard-adjusting lever secures the guard before operation. Keep the guard between you and wheel. Do not direct the guard opening towards your body.

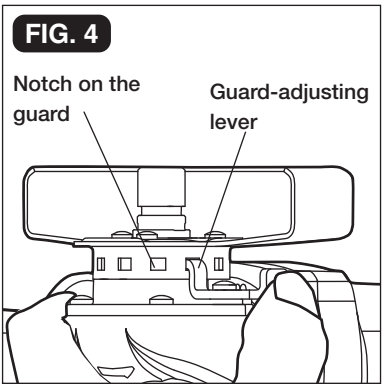

MOUNTING THE WHEEL (FIG. 5-6)

⚠ WARNING: Only use grinding wheels for which the maximum safe operating speed is rated at or above 13200 RPM. Never use damaged or imbalanced grinding wheels. Do not exceed the recommended wheel diameter. Grinding wheel type 27 is recommended for use on this grinder.

⚠ WARNING: Failure to remove the battery pack from the cordless angle grinder when assembling parts, making adjustments, or changing application tools could result in accidental starting and cause serious injury.

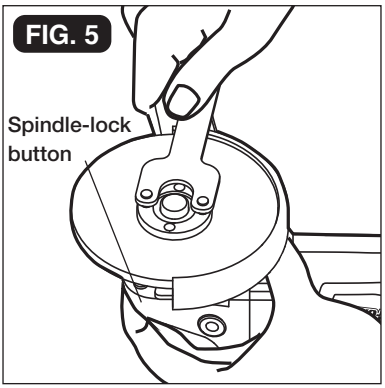

1. Remove the battery pack from the angle grinder.
2. Make sure that the guard is securely in place. Depress and hold the spindle-lock button. Loosen the outer flange with the supplied wrench while holding the spindle-lock button down (FIG. 5).
3. Place the inner flange on the spindle; make sure that the flange is positioned so that the shape of the opening in the flange corresponds with the shape at the base of the spindle.
4. Place the grinding wheel on the spindle. Check the rated speed on the grinding wheel. DO NOT use a wheel with a rated speed lower than the speed shown on the grinder nameplate.

5. Thread the outer flange on the spindle with the flat side of the flange facing up, making sure that the opening in the wheel is positioned around the raised portion of the outer flange (FIG. 6).
6. Press the spindle-lock button to prevent movement of the spindle.
7. Keep the spindle-lock button depressed; tighten the threaded outer flange by turning it clockwise with the wrench (FIG. 6).

⚠ WARNING: Keep the guard between you and the wheel. Do not direct the guard opening toward your body.

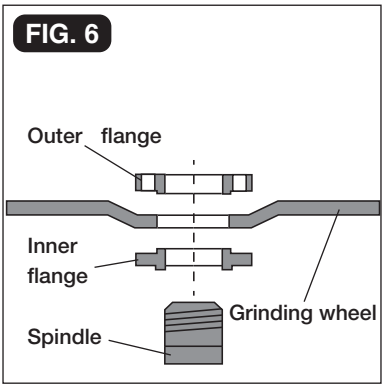

GRINDING OPERATION (FIG. 7)

⚠ WARNING: Only use grinding wheels for which the maximum safe operating speed is rated at or above 13200RPM. Never use damaged or imbalanced grinding wheels. Do not exceed the recommended wheel diameter. Grinding wheel type 27 is recommended for use on this grinder.

⚠ WARNING: Firmly grasp the body of the tool and the side handle before starting.

GRINDING TIPS

• Use a clamp, vise or other practical means to hold your work, freeing both hands to control your tool. Firmly grasp the body of tool and the side handle before starting and while the tool is in operation.

• Efficient grinding is achieved by controlling the pressure and keeping the angle between the wheel and the workpiece at 10° to 15° (FIG. 7). If the angle is too shallow the tool is difficult to control. If the angle is too steep, the pressure is concentrated on a small area, causing burning to the work surface.

• Move the angle grinder back and forth with moderate pressure to avoid discoloring the workpiece, overheating the workpiece and creating ridges.

• Never use a cut-off wheel to grind a work piece.

• Always hold the tool properly so that sparks and grinding dust fly away from the body.

• Start the tool before applying the accessory to workpiece and let the tool come to full speed before contacting the workpiece. Lift the tool from the workpiece before turning the tool OFF.

• When grinding with a new wheel, be certain to grind while pulling tool backwards until wheel becomes rounded on its edge. New wheels have sharp corners, which tend to "bite" or cut into workpiece when pushed forward.

⚠ WARNING: Sparks are generated when grinding metal. Take care that no combustible material presented in the area of flying sparks.

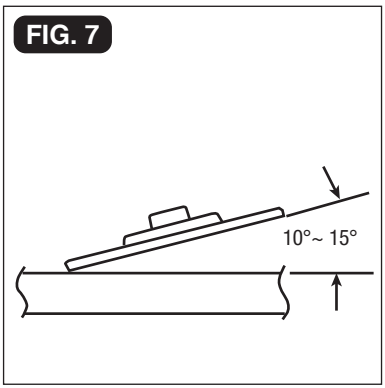

MAINTENANCE

⚠ WARNING: When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. For more information, call the toll-free helpline, at 1-866-917-4374.

⚠ WARNING: To ensure safety and reliability, all repairs should be performed by a qualified service technician. For more information, call the toll-free help-line, at 1-866-917-4374.

⚠ WARNING: Before cleaning or performing any maintenance, the tool should be unplugged from the power supply.

⚠ WARNING: If the supply cord is damaged, it must be replaced by a specially prepared cord available through the service organization.

GENERAL MAINTENANCE

Using compressed air may be the most effective cleaning method. Always wear safety goggles when cleaning tools with compressed air. Periodic maintenance allows for long life and trouble-free operation. A cleaning, lubrication and maintenance schedule should be maintained.

1. Avoid dropping or otherwise causing impact to the tool and keep it from oil and grease.
2. Inspect the screws periodically. If the screws loosen, tighten them immediately, to avoid serious accident.
3. Clean all parts of the tool; clean dust and debris from vents. Keep the tool clean, dry and free of oil or grease.
4. Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths and mild soap to remove dirt, dust, etc.

LUBRICATION

All of the bearings in this product are lubricated with a sufficient amount of high grade lubricant for the life of the unit under normal operating conditions. Therefore, no further lubrication is required.

STORAGE AND HANDLING OF GRINDING WHEELS

When not in use, grinding wheels should be stored carefully in a rack or box to protect them from chipping or breakage. All grinding wheels must be handled carefully to prevent dropping and bumping.

TROUBLESHOOTING

PROBLEM	CAUSE OF THE PROBLEM	SOLUTION
The motor stops running	Battery is depleted	Charge the battery pack
The angle grinder does not work	The switch is in the “ON” position when attaching the battery pack	Turn off the angle grinder first and re-start the tool
The tool is running slowly	The grinder wheel is worn out	Replace the grinding wheel on the tool

NOTES

NOTES

NOTES

ANGLE GRINDER
WARRANTY

90-DAY MONEY BACK GUARANTEE:

This MASTERFORCE® brand power tool carries our 90-DAY Money Back Guarantee. If you are not completely satisfied with your MASTERFORCE® brand power tool for any reason within ninety (90) days from the date of purchase, return the tool with your original receipt to any MENARDS® retail store, and we will provide you a refund – no questions asked.

3-YEAR LIMITED WARRANTY:

This MASTERFORCE® brand power tool carries our famous No Hassle 3-Year Limited Warranty to the original purchaser. If, during normal use, this MASTERFORCE® power tool breaks or fails due to a defect in material or workmanship within three (3) years from the date of original purchase, simply bring this tool with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, MASTERFORCE® agrees to have the tool or any defective part(s) repaired or replaced with the same or similar MASTERFORCE® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. Not withstanding the foregoing, this limited warranty does not cover any damage that has resulted from abuse or misuse of the Merchandise. This warranty: (1) excludes expendable parts including but not limited to blades, brushes, belts, bits, light bulbs, and/or batteries; (2) shall be void if this tool is used for commercial and/or rental purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state. Be careful, tools are dangerous if improperly used or maintained. Seller's employees are not qualified to advise you on the use of this Merchandise. Any oral representation(s) made will not be binding on seller or its employees. The rights under this limited warranty are to the original purchaser of the Merchandise and may not be transferred to any subsequent owner. This limited warranty is in lieu of all warranties, expressed or implied including warranties or merchantability and fitness for a particular purpose. Seller shall not be liable for any special, incidental, or consequential damages. The sole exclusive remedy against the seller will be for the replacement of any defects as provided herein, as long as the seller is willing or able to replace this product or is willing to refund the purchase price as provided above. For insurance purposes, seller is not allowed to demonstrate any of these power tools for you.

For questions / comments, technical assistance or repair parts – Please Call Toll Free at: **1-866-917-4374**. (M-F 8am – 6pm EST)

SAVE YOUR RECEIPTS
THIS WARRANTY IS VOID WITHOUT THEM

MENARDS®

© 2014 Menard, Inc., Eau Claire, WI 54703

09/2014